

# Control Remoto

REMOTE CONTROL

+ **kölbi hogar** TV



## BIENVENIDO A SU SERVICIO


Con la Guía de uso de Kölbi hogar TV, te ofrecemos una experiencia única al interactuar con el Televisor, con la tecnología más avanzada y el mejor entretenimiento.

Para el uso adecuado del servicio recordá:

- Que el equipo receptor con la luz azul en frente (STB) y la televisión estén encendidos.
- Para encender el TV presioná la tecla TV + Botón de Power; si necesitás encender el equipo receptor presioná la tecla STB + Botón de Power
- El equipo puede tardar hasta 2 minutos en capturar la señal TV.
- En el caso de no recibir señal verificá que el input seleccione HDMI.

Botón	Descripción
1 POWER	Cambia el on/off del dispositivo actualmente seleccionado. Cambia STB para encender o ponerlo en modo stand by.
2 CONTROL DE DISPOSITIVOS	TV: Seleccione una TV de control (si está programado). STB: Este botón está pre-programado para controlar el STB Entone. AUX: seleccione esta opción para controlar otro dispositivo (si está programado).
3 BOTONES DE REPRODUCCIÓN	Controles de programa de video en vivo de TV / DVR / VoD. REPLAY: Reproduce unos segundos. REW: Rebobina el video. FF: Adelanta el video. SKIP: Salta adelante en incrementos de 30 segundos y avanza bloques de 12hrs en la guía interactiva. REC: Inicia programa de grabación. PAUSA: Pausa de video. PLAY: Reproducción de video o reanuda un programa en pausa. STOP: Detiene la reproducción del video
4 ATAJOS	ROJO: Muestra la mini guía (si se presiona dos veces muestra información de lo que se está transmitiendo). AMARILLO: Muestra la Guía Interactiva. VERDE: Se puede ver la resolución de la pantalla, el audio alterno y subtítulos (depende del proveedor de canales). AZUL: Salir de cualquier menú.
5 MENÚ	Muestra el menú en pantalla
6 INFO	Muestra la mini guía (si se presiona dos veces muestra información de lo que se está transmitiendo).
7 NAVEGACIÓN	TECLAS DE FLECHA: navega hacia arriba, abajo, izquierda y derecha en la pantalla o los menús. OK: Ejecuta la opción seleccionada.
8 EXIT	Salir de cualquier menú.
9 GUIDE	Muestra la Guía Interactiva.
10 CH/PG	Cambios de canal arriba/abajo. Pasar por bloques dentro de la Guía Interactiva, VoD, DVR, búsqueda, entre otros.
11 LAST	Cambiar al canal anterior.
12 NÚMEROS CLAVES	Una forma directa de seleccionar el canal. Puede utilizarse como teclado en ciertos menús.
13 CC	Encender o apagar subtítulos.
14 INPUT	Cambia la corriente de entrada del dispositivo seleccionado programada (ejemplo: TV o AUX). Mostrar teclado en pantalla para ciertas aplicaciones.
15 MUTE	Silenciar el canal.
16 VOL +/-	Subir o bajar el volumen del canal.
17 BACK	Utilizado para borrar caracteres.
18 OPTIONS	No tiene función.

+ **kölbi hogar** TV

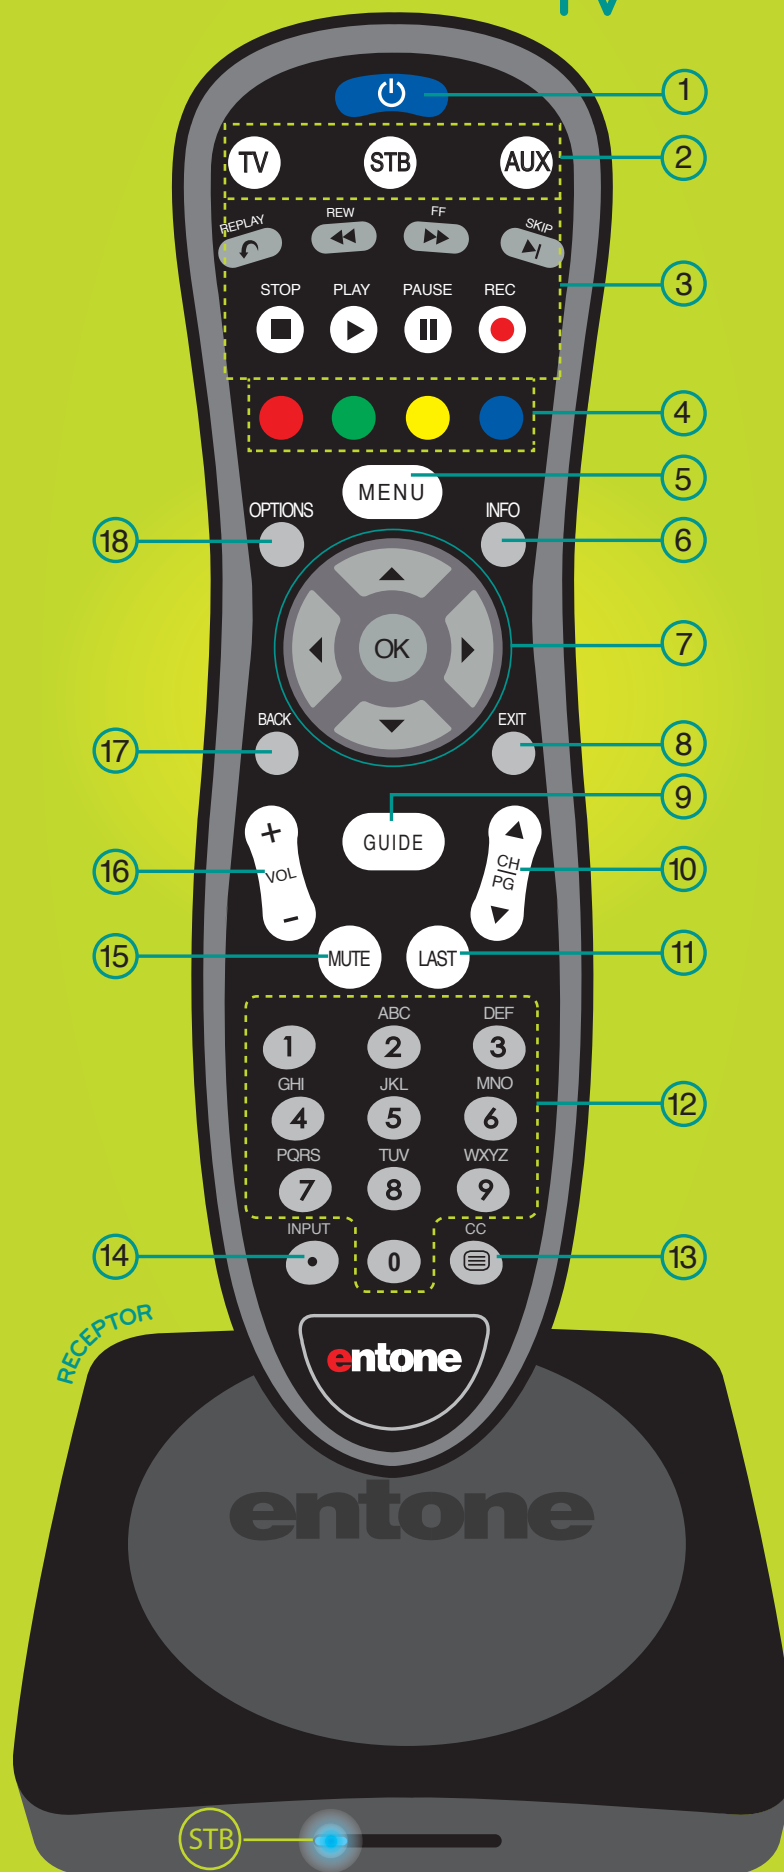

## WELCOME TO YOUR SERVICE

kölbi Hogar TV User Guide service, offers a unique experience by interacting with the Television, using the latest technology and providing the best entertainment.

For an adequate use of the service, remember:

- That the receiving equipment with blue light in front (STB) and the television must be turned on.
- To turn the TV on, press the TV + Power buttons; if you need to turn the receiving equipment on, press the STB + Power buttons.
- It may take up to 2 minutes for the equipment to capture the TV signal.
- If no signal is received, verify the input selected is HDMI.

Button	Description
1 POWER	Switches the power on/off for the currently selected device Switches STB to power on or standby mode.
2 DEVICE CONTROL	TV: Select to control TV (if programmed) STB: This button is pre-programmed to control the Entone device AUX: Select this option to control another device (if programmed).
3 VIDEO PROGRAM CONTROLS	TV / DVR / VoD live video controls REPLAY: Replays a few seconds REW: Rewinds video FF: Fast forwards video SKIP: Advances ahead in 30 second increments and advances 12-hr blocks in the interactive guide. REC: Starts recording a program. PAUSE: Pauses video. PLAY: Plays video or resumes a paused program. STOP: Stops playback of video.
4 SHORTCUTS	RED: Displays mini guide (if pressed twice, it displays information about what is being transmitted). YELLOW: Displays the Interactive Guide. GREEN: Displays screen resolution, alternate audio and closed captions (depends on channel provider) BLUE: Exits any menu.
5 MENU	Displays on-screen menu.
6 INFO	Displays the mini guide (if pressed twice, it displays information of what is being transmitted).
7 NAVIGATION	ARROW KEYS: navigates up, down, left and right on the screen or the menus. OK: Executes the currently selected option.
8 EXIT	Exits any menu.
9 GUIDE	Displays the Interactive Guide.
10 CH/PG	Changes channels up/down. Goes through blocks in the Interactive Guide, VoD, DVR, search, among others.
11 LAST	Changes to previously tuned channel.
12 KEY NUMBERS	A direct way of selecting channels Can be used as a keyboard in certain menus.
13 CC	Enables/disables captions
14 INPUT	Changes current input of the selected device programmed (example: TV or AUX). Displays on-screen keyboard for certain applications.
15 MUTE	Mutes the channel.
16 VOL +/-	Raises or lowers the channel's volume.
17 BACK	Used to delete characters.
18 OPTIONS	Has no function.